
 
 
 








 

 
 




# Electronic Scoreboard Remote Manual



-  Period
-  Game type selection
-  Activate buzzer
-  Reset shot clock to 24 sec
-  Reset shot clock to 14 sec
-  Shot clock start/stop
-  Count up
-  Count down
-  Possession left
-  Possession right
-  Clear timer
-  Score adding
-  Score minus
-  Reset game timer
-  Game timer start/stop
-  Fouls left and right

To change to count up or count down

Press  then press , or 



## WARNING

To prevent fire or electronic shock, do not expose this unit to rain or moisture.