

Installation Manual for Portable Soccer Goal (Box Style)


Goal size: 7.32m x 2.44m

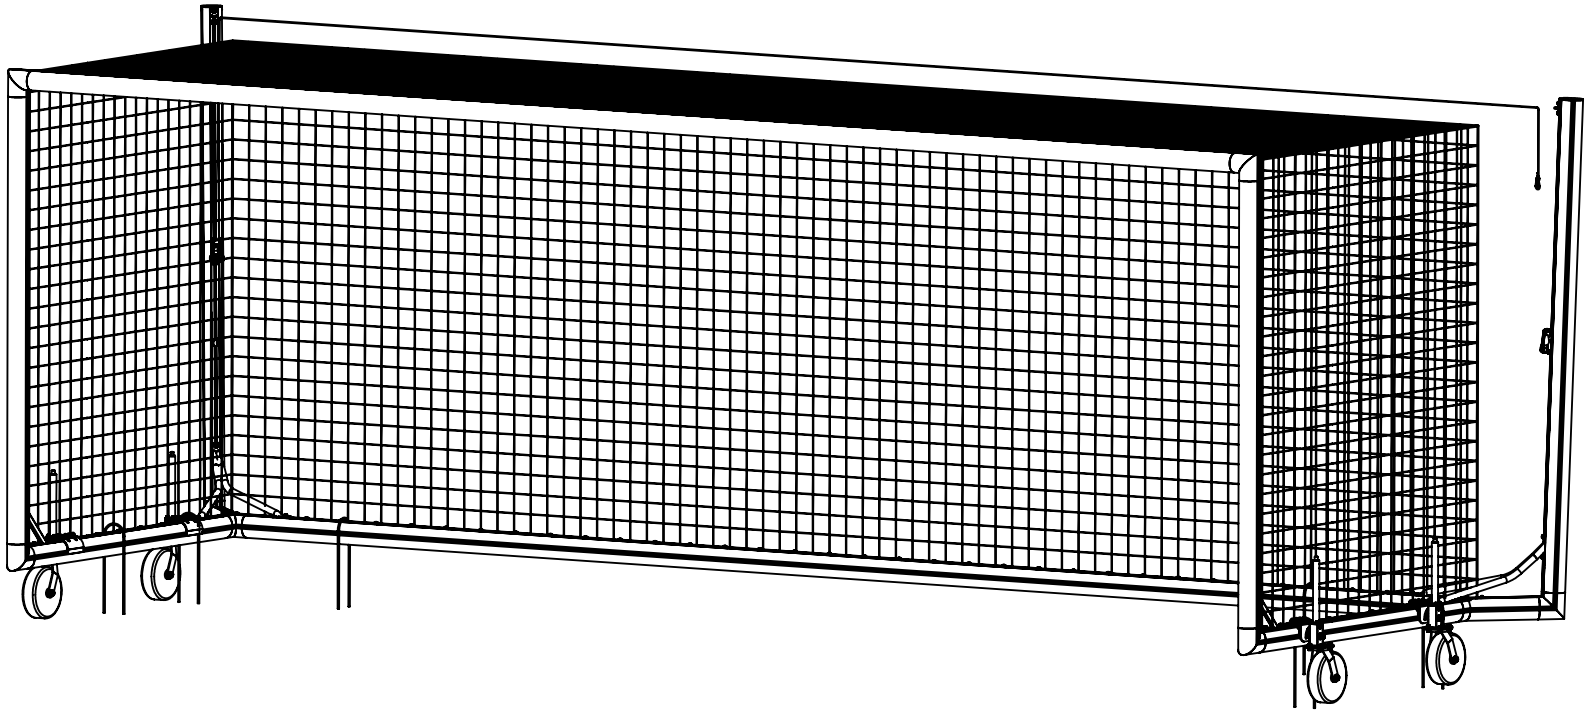

Crossbar x2




Back Upright Bar (Black) x2




Front Upright Bar (White) x2




Ground Bar (White) x2




Upper 2-Way Elbow x2




Rear 2-Way Elbow




Bottom Support Plate x2

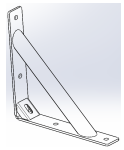


Upper Connection Plate x2

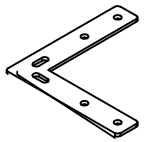


Bottom 2-Way Elbow x2




Hex Socket Pan Head Screw M8x20 x36

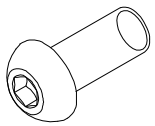


Hex Bolt M10x20 x24




Hex Bolt M10X25 x6




Triangle Corner x 2

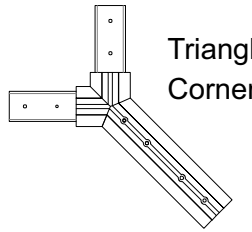


Triangle Support x2

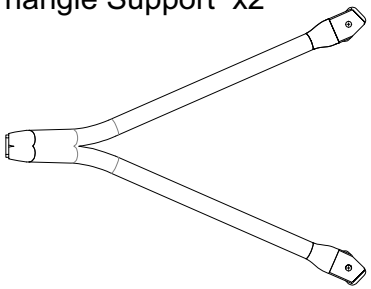


Hex Socket Pan Head Screw M6x10 x4



Rachet x2



Connection Plate x2




Pan Head Screw M5x16 x4




Locking Washer φ8 x36




Hex Nut M10 x30



Left Wheels x2

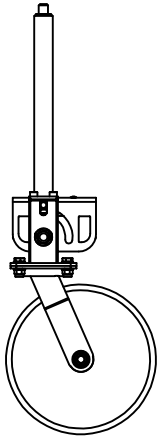

Right Wheels x2

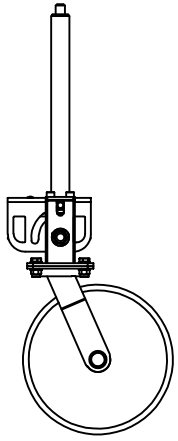


Flat Washer φ8 x36




Flat Washer φ10 x30



Clip L2 x8



Clip L1x112




Locking Washer φ10 x16



Cap Nut M10 ×16




Step 1: Install Crossbar + Triangle Corner + Ground Bar.

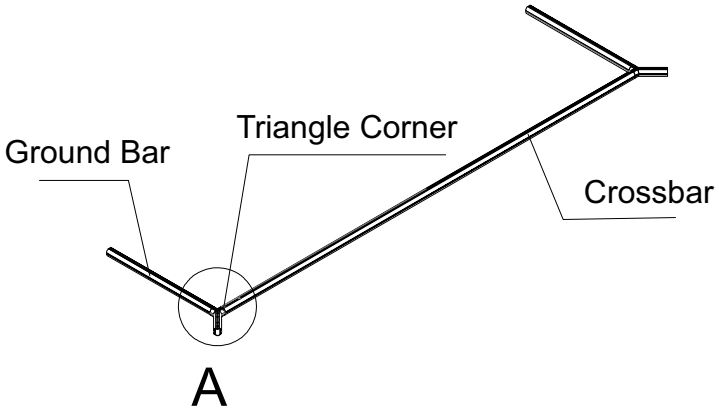


Each side requires:


Screw M8x20	4pcs
Locking Washer φ8	4pcs
Flat Washer φ8	4pcs

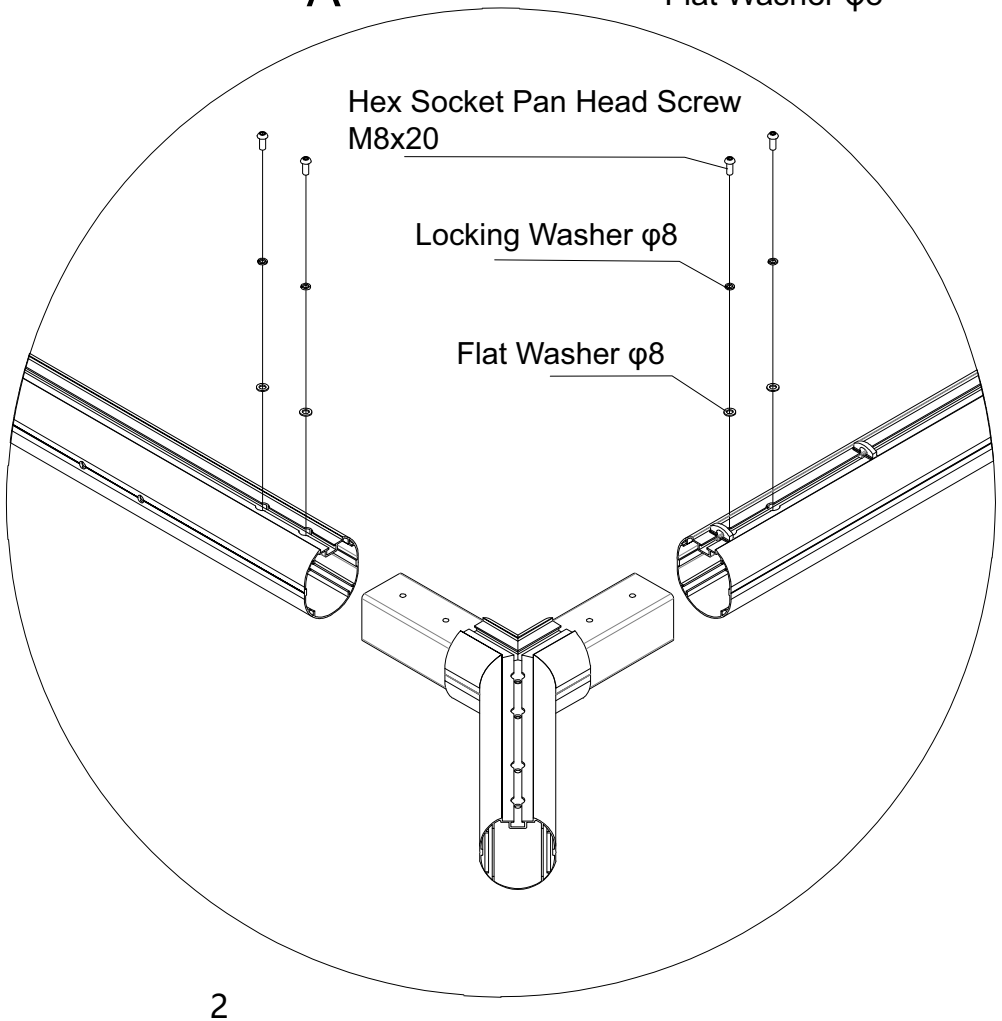

Step 2: Install Front Upright + 2-Way Elbow.

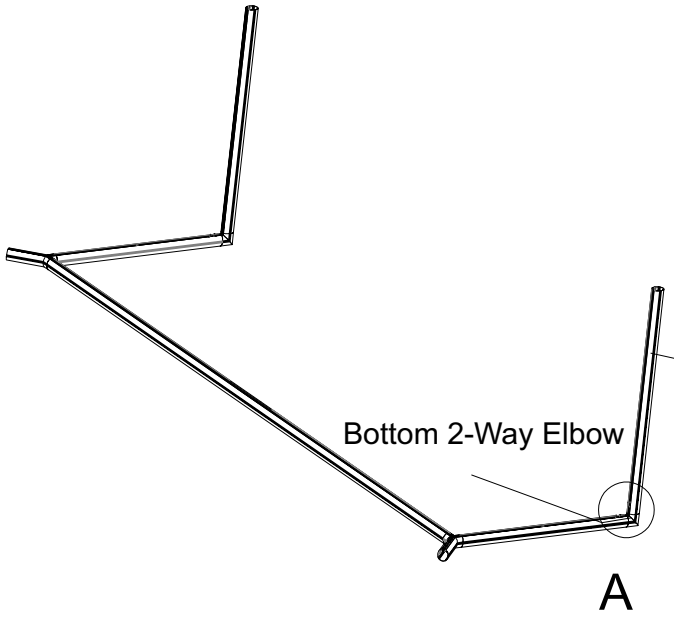


Bolt Position Drawing

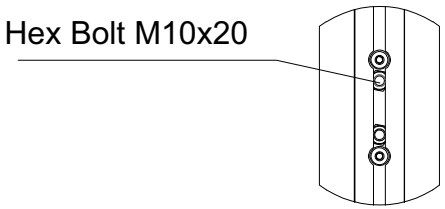


Each side requires:

Screw M8x20	4pcs
Hex Bolt M10x20	4pcs
Locking Washer φ8	4pcs
Flat Washer φ8	4pcs

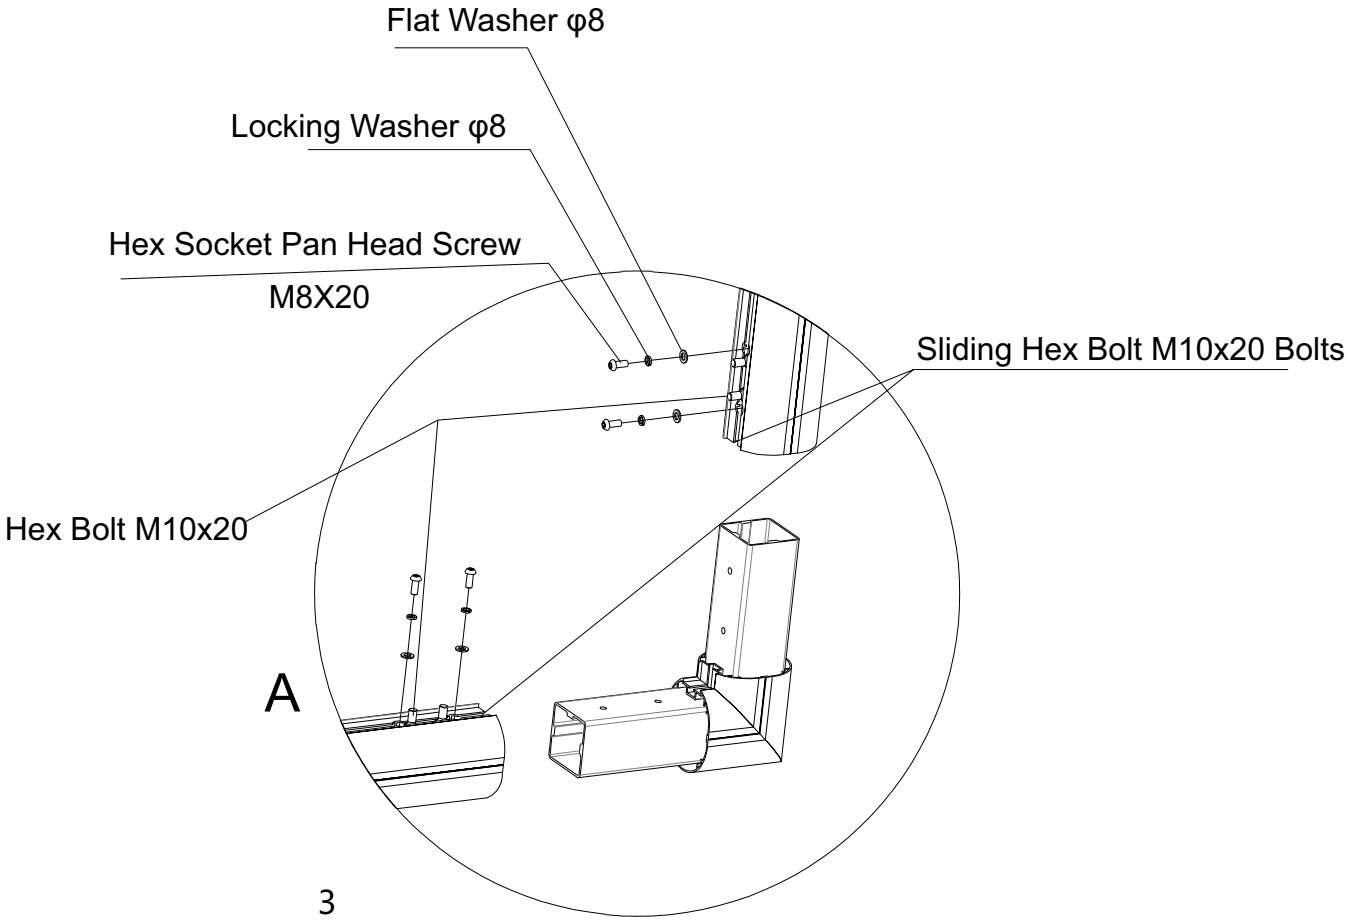

Step 3: Install Bottom Support Plates.

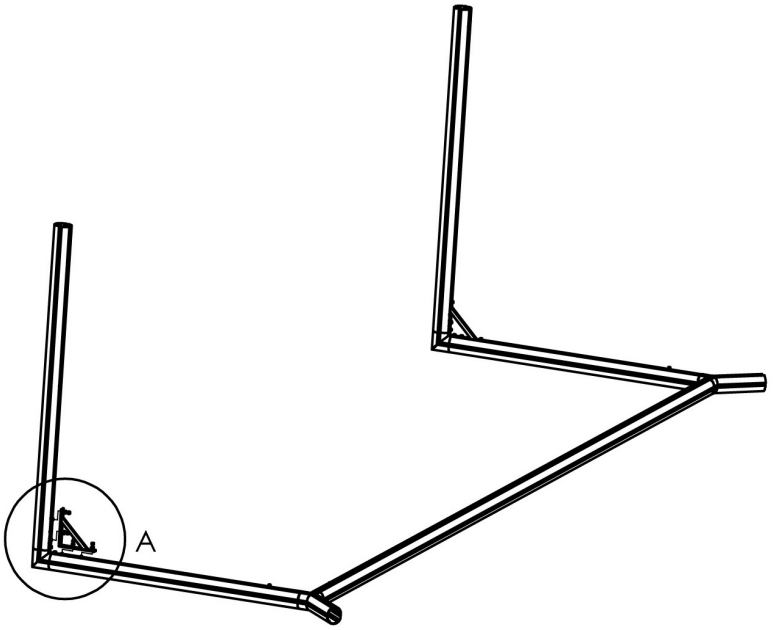

Each side requires:

Hex Nut M10	4pcs
Flat Washer φ10	4pcs

Hex Bolt M10×20

Bottom Support Plate


Hex Nut M10



asher φ10

A


Step 4: Install Crossbar + Upper 2-Way Elbow.

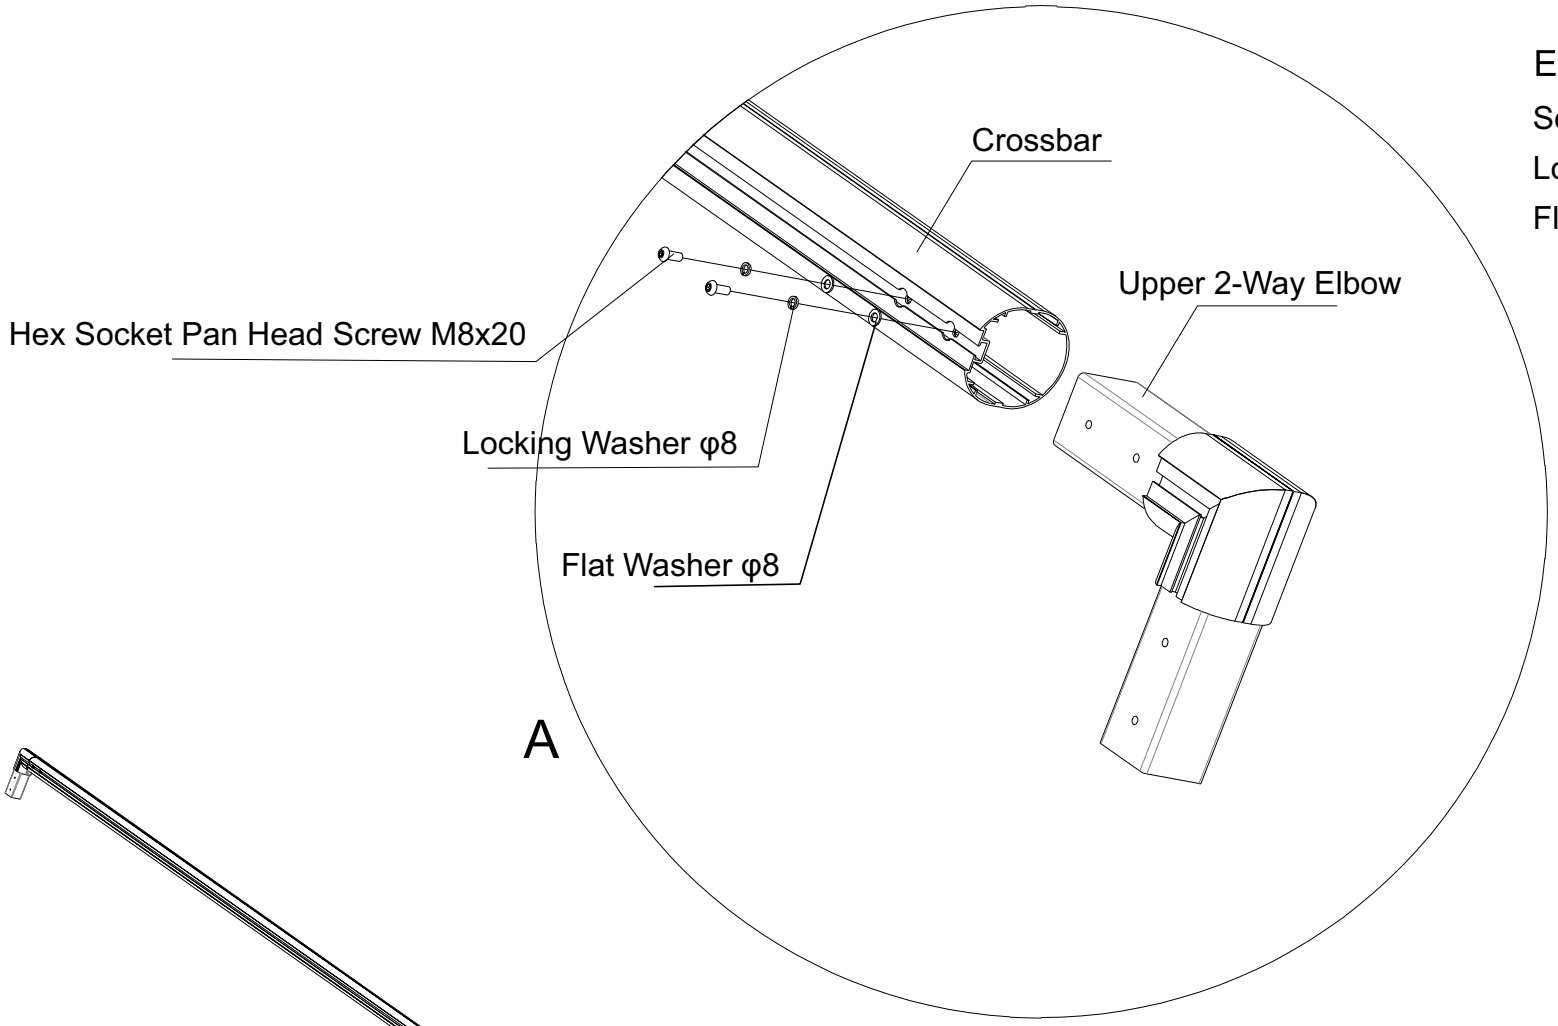

Each side requires:


Screw M8x20	2pcs
Locking Washer φ8	2pcs
Flat Washer φ8	2pcs

Step 5: Connect Upper 2-Way Elbow + Crossbar to Front Upright bar.

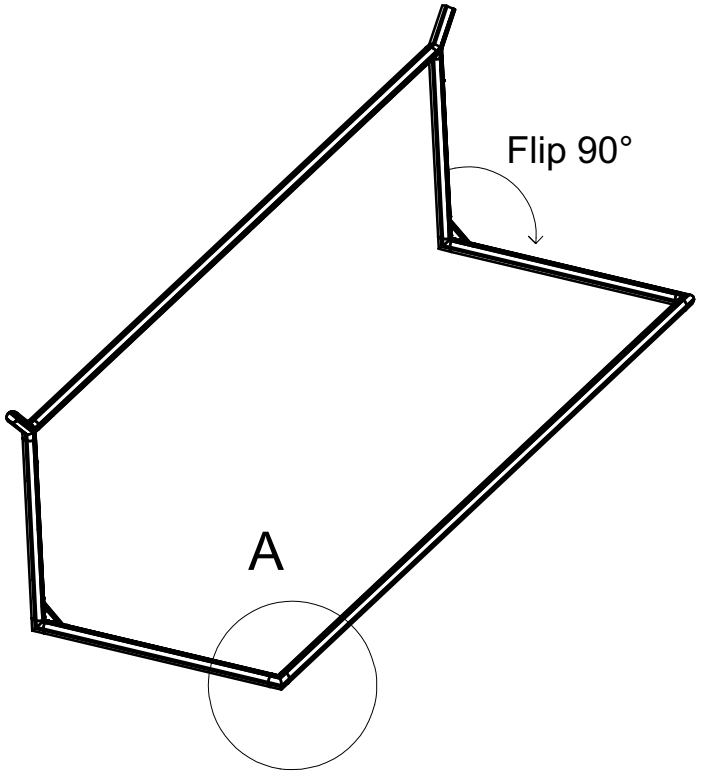


Each side requires:

Screw M8x20	2	pcs
Locking Washer φ8	2	pcs
Flat Washer φ8	2	pcs

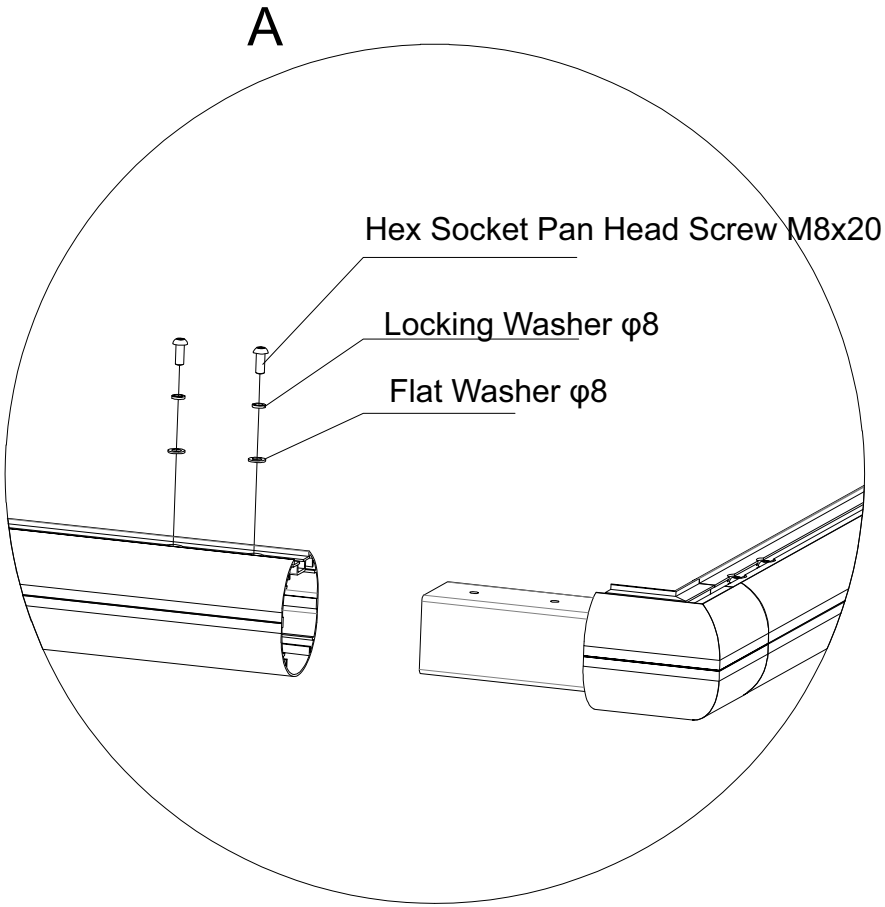


Step 6: Install Upper Connection Plate.

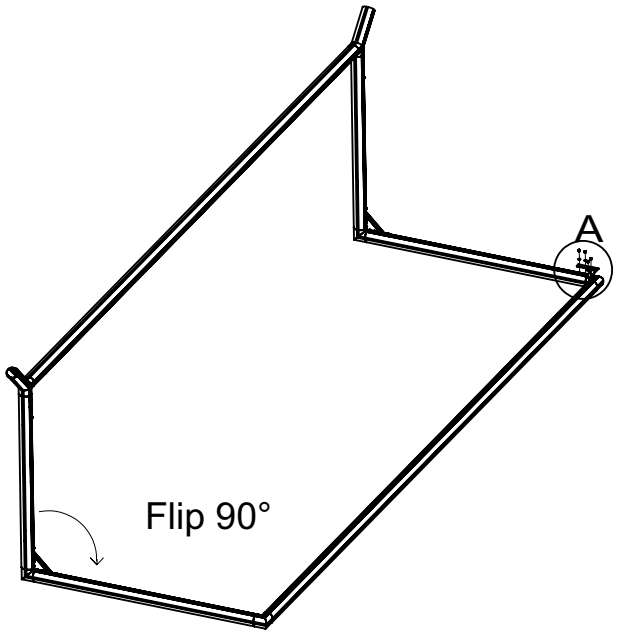


Each side requires:

Hex Bolt M10x20	4pcs
Flat Washer φ10	4pcs
Hex Nut M10	4pcs

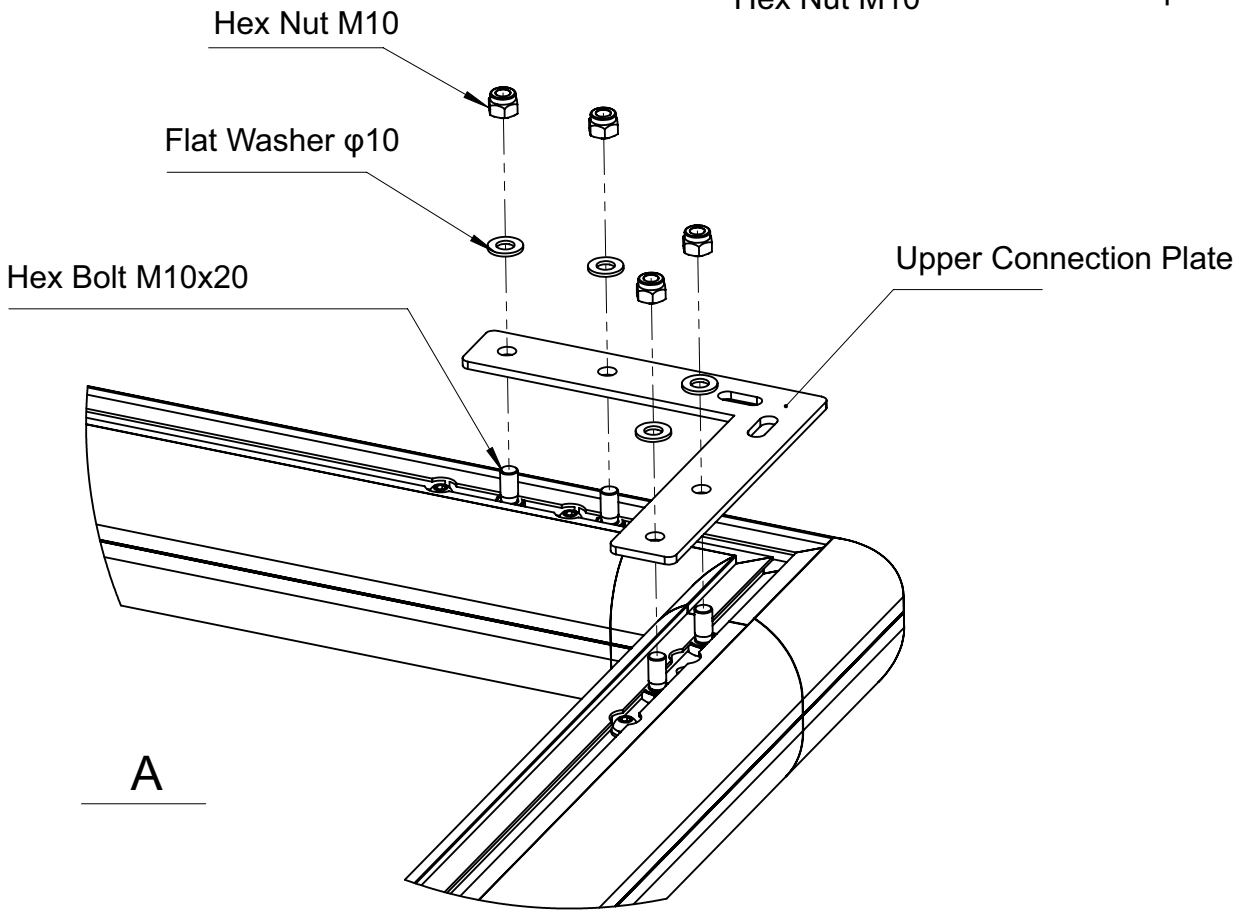


Step 7: Install Connection Plates on Back Upright Bar.

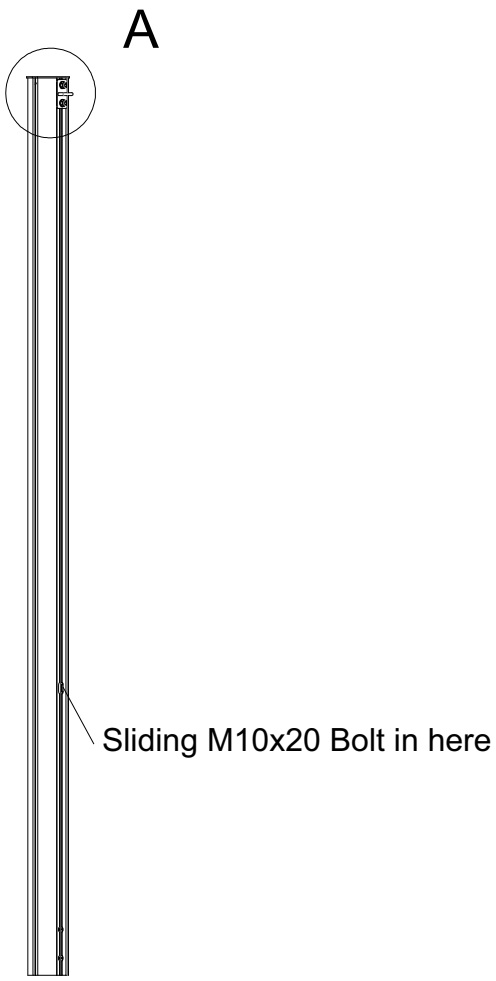


Each side requires:

Hex Bolt M10x20	2pcs
Hex Nut M10	2pcs
Flat Washer φ10	2pcs

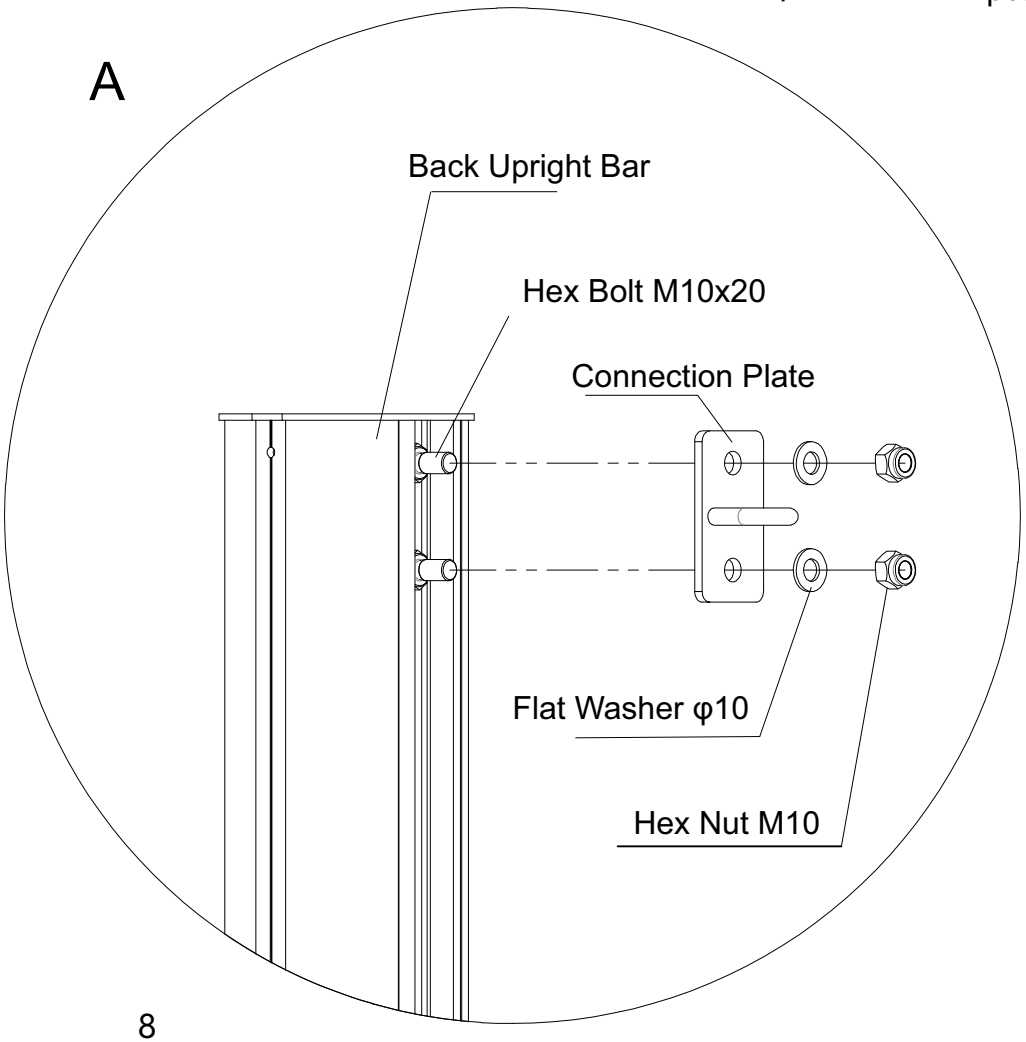


Step 8: Install Rear 2-Way Elbow + Back Upright Bar.

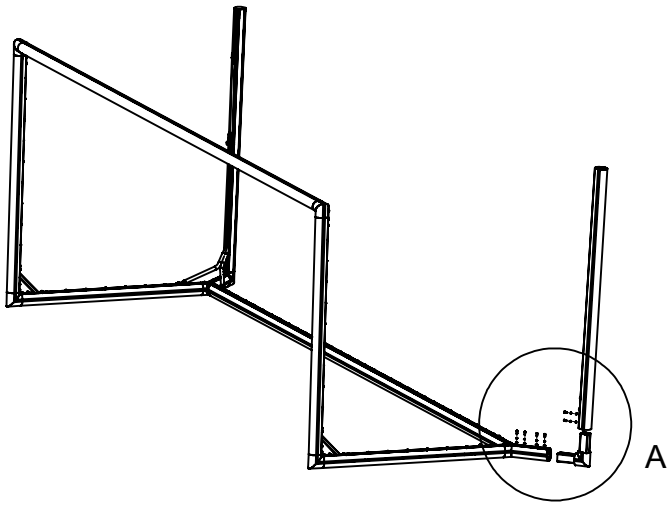


Each side requires:

Screw M8x20	6pcs
Locking Washer φ8	6pcs
Flat Washer φ8	6pcs

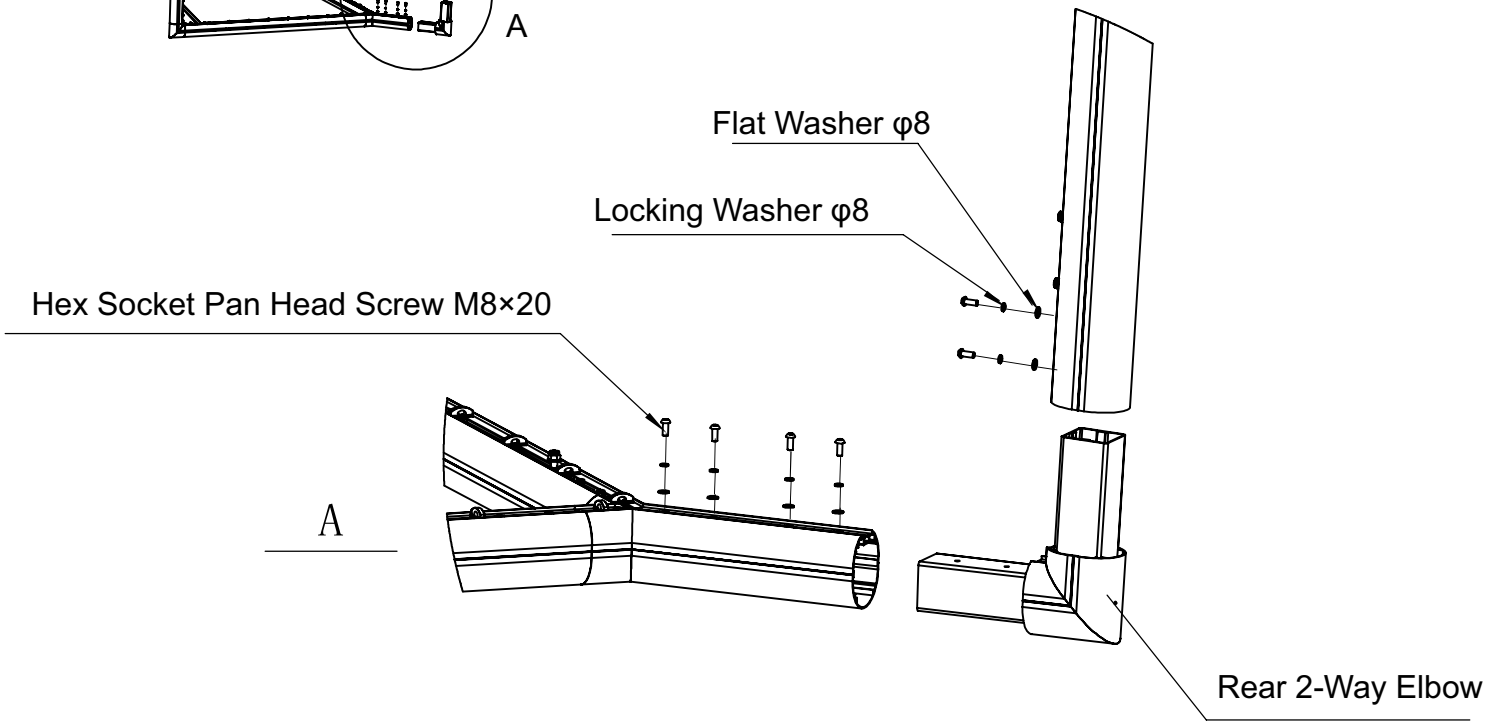


Step 9: Install Triangle Support.

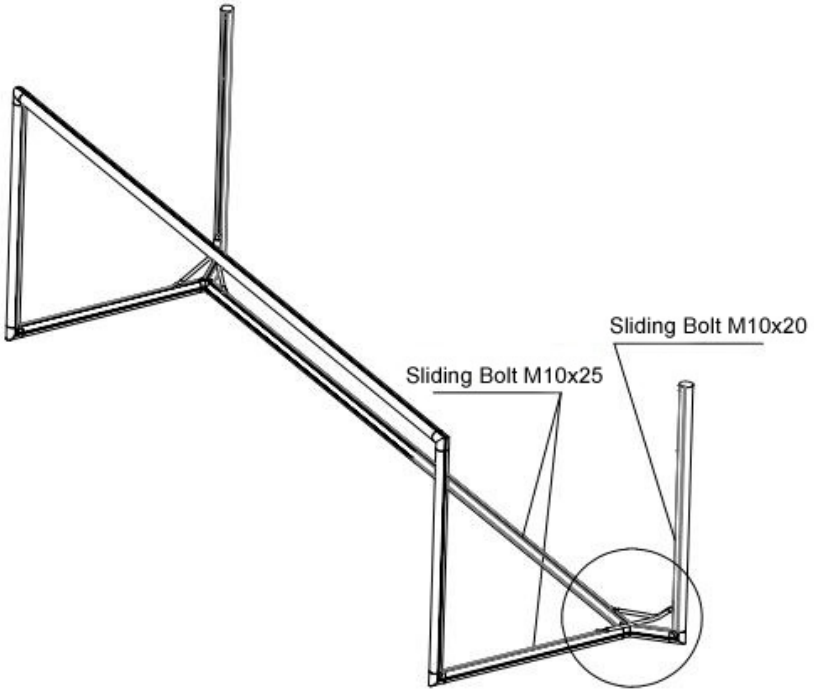

A

Each side requires:


Hex Bolt M10x25	2pcs
Hex Bolt M10x20	2pcs
Hex Nut M10	4pcs
Flat Washer φ10	4pcs

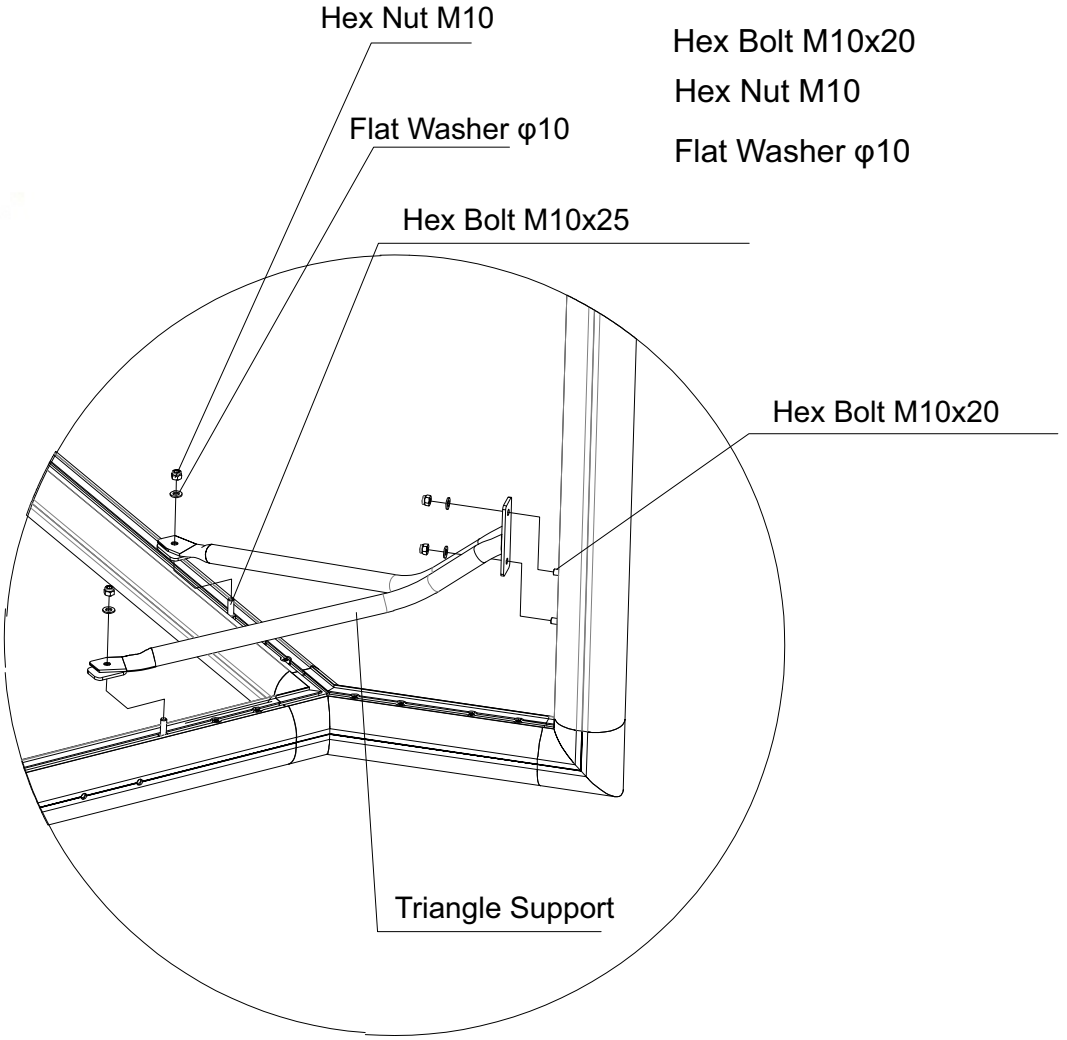

A


Step 10: Install Wheels.

When installing the wheels, please make note of installing the Left and Right wheels on the correct side and direction.

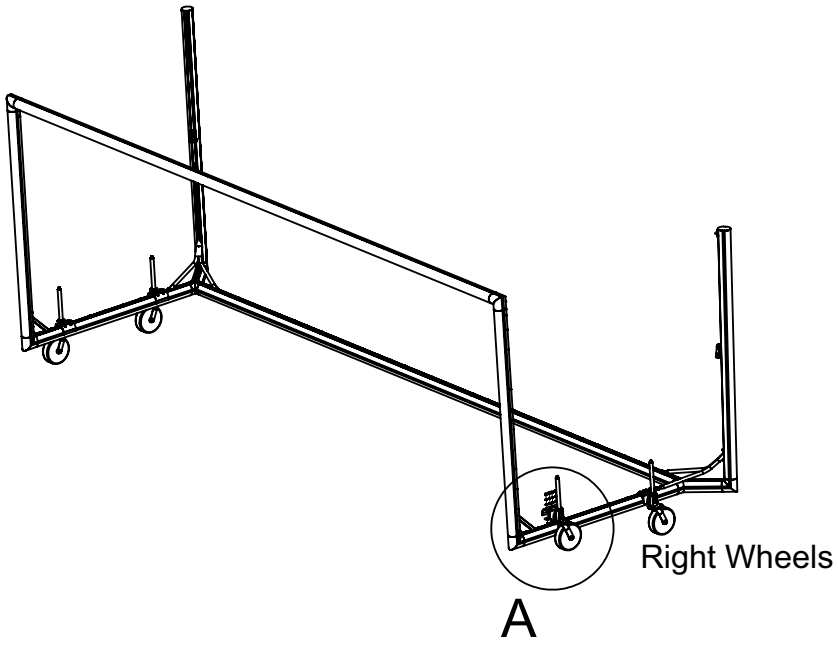


Each side requires:

Cap Nut M10	4pcs
Locking Washer φ10	4pcs
Flat Washer φ10	4pcs
Connecting Plate	1 pc
T-Bolt M10	4 pcs

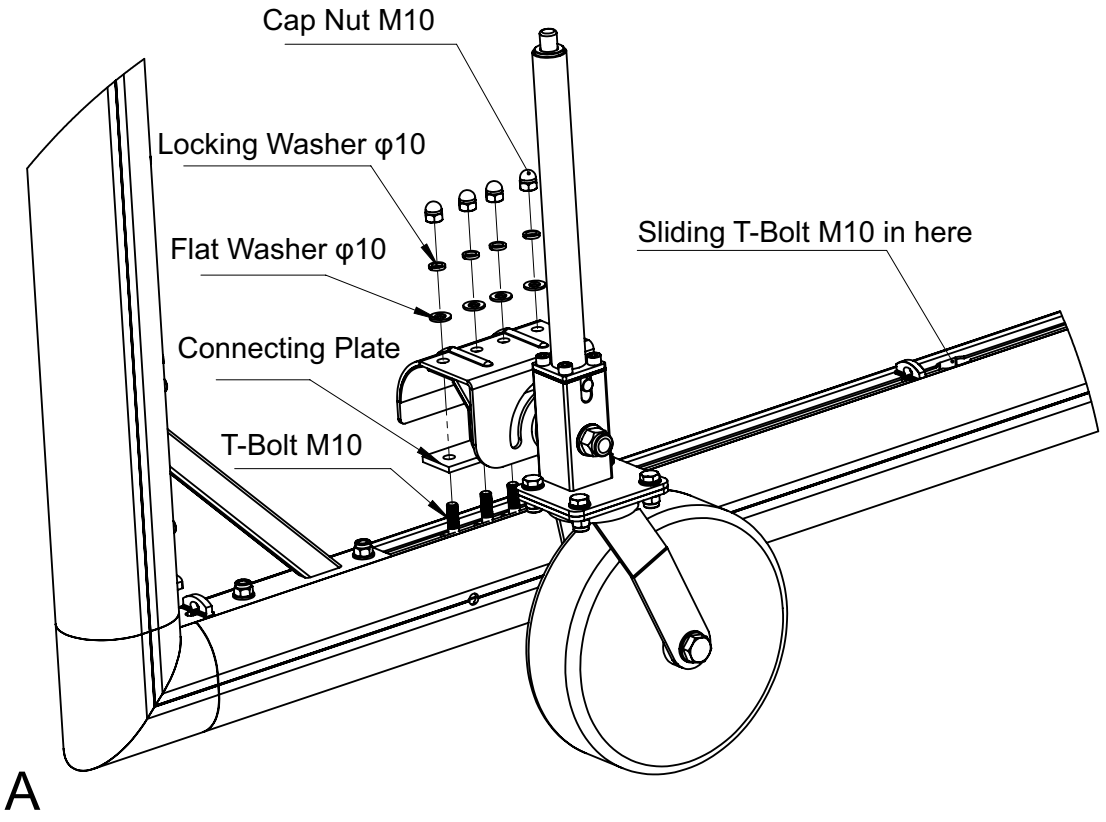


Step 11: Install Rachet on Back Upright Bar.

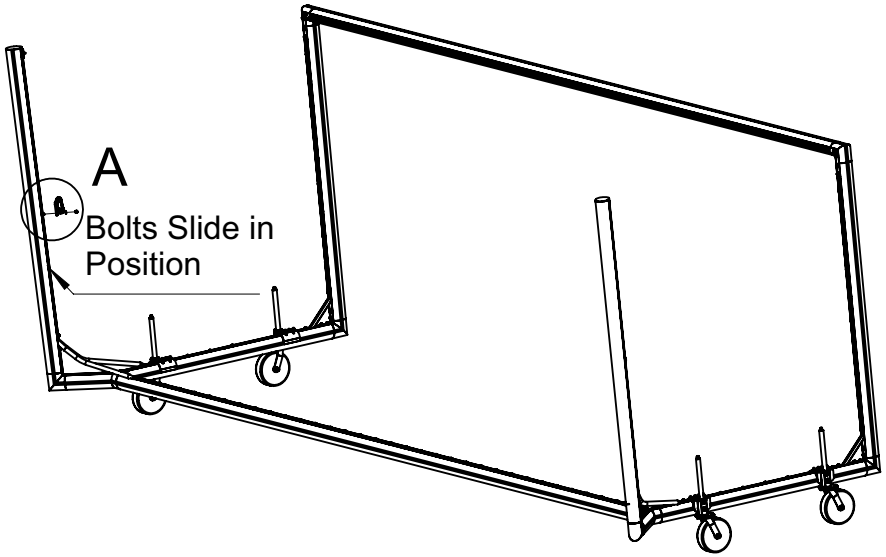


Each side requires:


Hex Bolt M10x25	1pc
Flat Washer φ10	1pc
Hex Nut M10	1pc

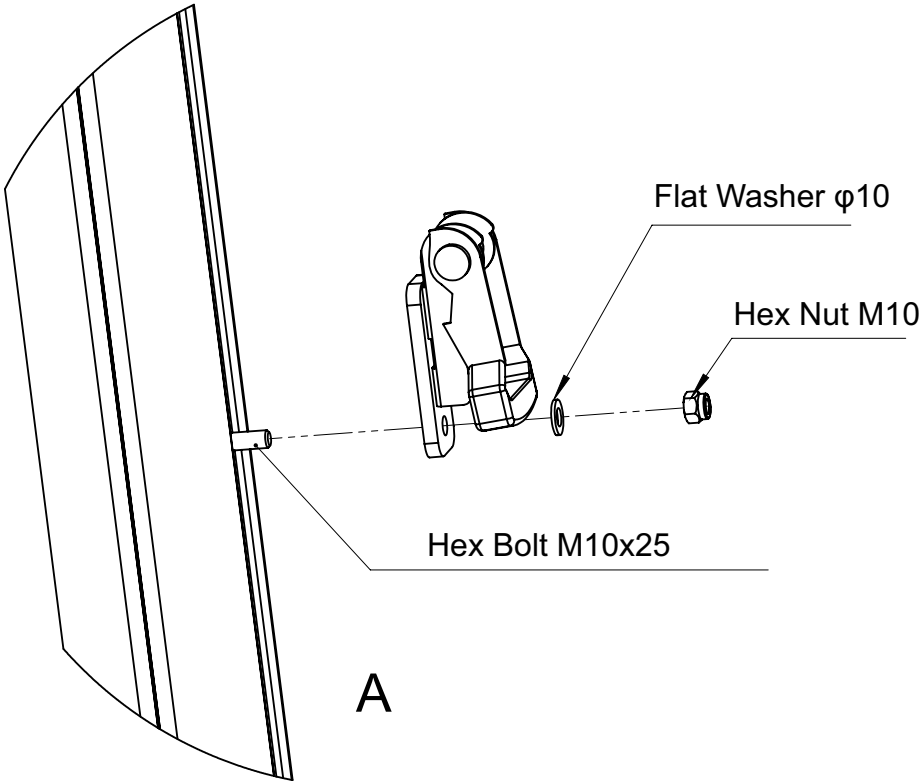

Step 12: Install Net with Net Clips.

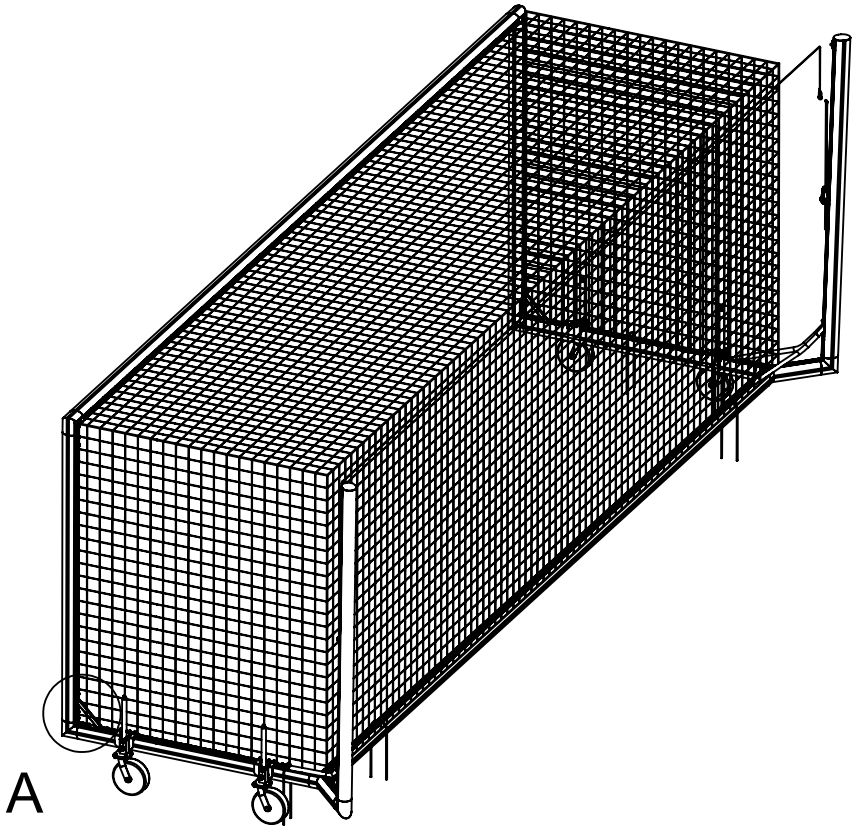


Clip L1	112 pcs
Clip L2	8 pcs

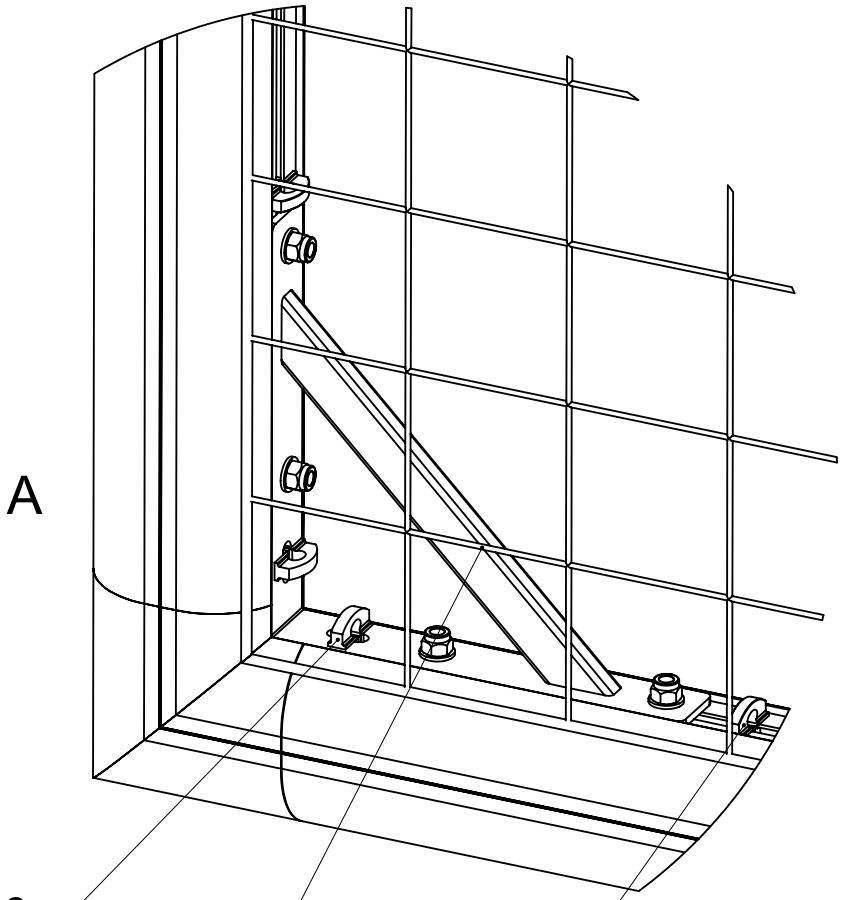


ASSEMBLY GUIDE

PORTABLE ALUMINIUM GOALS

FULLSIZE BOX WITH 360° WHEELS

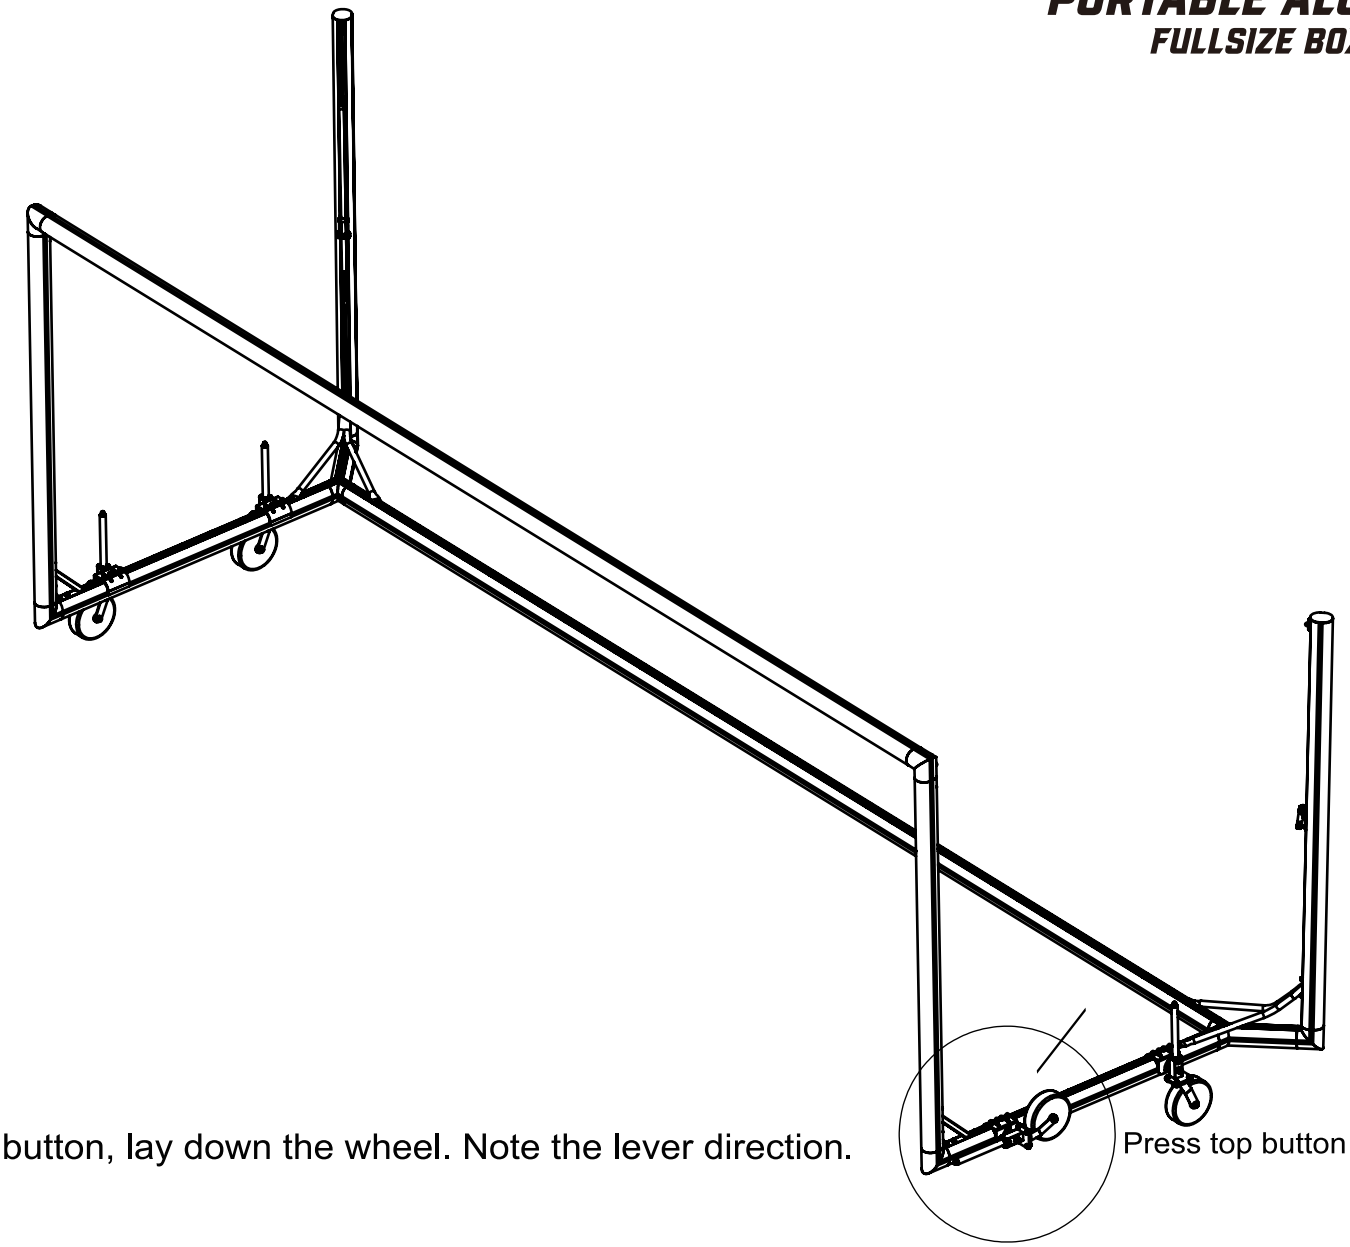

Press top button, lay down the wheel. Note the lever direction.

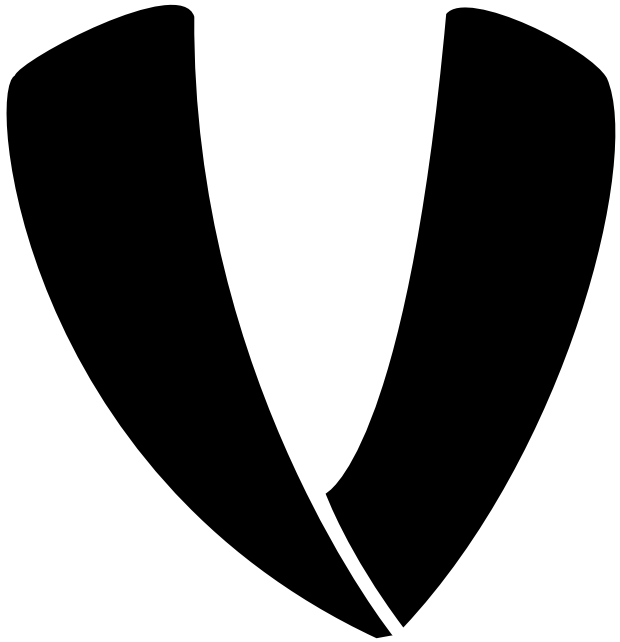

HQ & Distribution Centre
1/247 Sherbrooke Rd
Willawong QLD 4110
www.vetosports.com
admin@vetosports.com | 07 3345 8006